INSTALLATION INSTRUCTIONS

Item#4943 (New. 05/08/2013)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig. 1 and Fig. 4)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture including mounting hardware.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Adjust the arms to proper position. (Fig.4)
4. Attach fixture loop (A) by screwing to nipple (F).

HANGING THE FIXTURE (Fig. 2)

5. Thread the nipple into the ceiling loop until snug.
6. Thread the other end of the nipple with the ceiling loop attached into the crossbar until snug.
7. Place lock washer over the end of nipple protruding through crossbar and thread hex nut onto nipple until snug.
8. Take this crossbar assembly and mount to the ceiling junction box with the mounting screws (Size: #8-32N*L0.5") provided. Secure mounting screws with a screwdriver. The side of crossbar marked "GND" must face out.
9. By measuring determine the correct number of links needed for the desired hanging height.
10. Attach the chain to the fixture loop (A) using a quick link. Quick link must be completely threaded closed when installed. Use a pair of chain pliers to open one end link of the chain and discard un-wanted chain. Slip the lock collar and canopy over the chain.
11. Use the chain pliers to open the other end link of the chain and lift the fixture to attach to the ceiling loop, close the chain link.
12. Lace the fixture wires through the chain and through the ceiling loop and nipple and pull until tight.

CONNECTING THE WIRE (Fig. 3)

13. At this point, connect the electrical wire as shown in figure 3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the crossbar using the Green Screw provided.
14. Tuck these wire connections neatly into the ceiling junction box and raise the canopy all the way to the ceiling. Raise the Lock Collar and thread onto the ceiling loop protruding through canopy.

FINISHING THE FIXTURE (Fig.1)

15. Place the tube (C) over the socket (E).
16. Install the light bulb(s) (not included) in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!). (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)** Clip the fabric shade(s) (D) onto the Bulb(s).

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Fig. 1

Set# A-012
-Crossbar
-Ground screw
-Mounting Screw*2

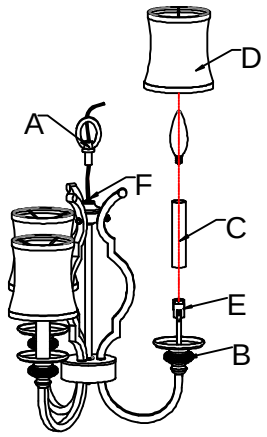

Fig. 2

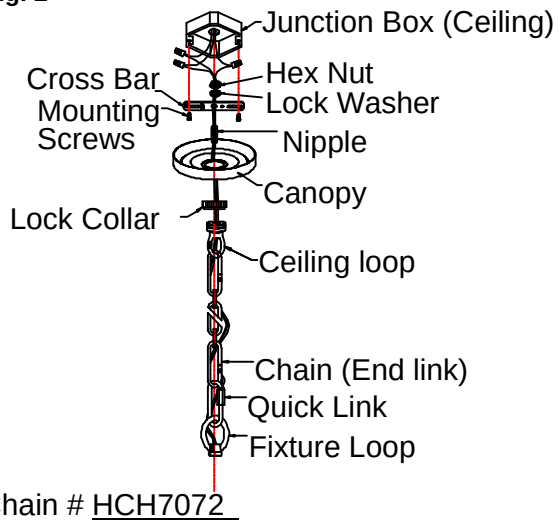

Chain # HCH7072

Fig. 3

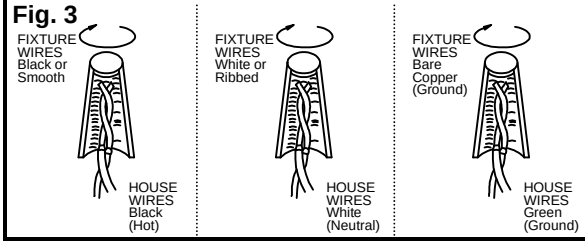
FIXTURE WIRES Black or Smooth
HOUSE WIRES Black (Hot)
FIXTURE WIRES White or Ribbed
HOUSE WIRES White (Neutral)
FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Green (Ground)

Fig. 4

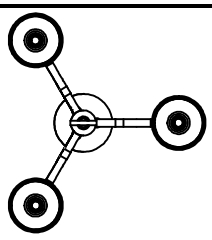

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

Intertek

american lighting association

LA-2289E